

## CREDIT PURCHASE/SALE

Enter sale amount, press OK  
 Press OK again and pass terminal to customer  
 Customer confirms sale amount  
 TIP: Customer chooses %, AMT or OK to skip, inputs tip and confirms total and  
 Customer inserts/swipes card, confirms amount again and enters PIN #  
 Terminal will process transaction  
 Merchant presses OK to print receipt and down arrow for customer copy

## CREDIT REFUND

Press the DOWN scroll arrow to access Transaction Menu  
 Press 5 for Refund function  
 Enter Merchant Password, press OK  
 Enter Invoice # of the transaction to be refunded, press OK  
 Enter refund amount, press OK  
 Press OK again and pass terminal to customer  
 Customer confirms sale amount and inserts/swipes card  
 Terminal will process refund and prints receipt  
 Merchant presses down arrow to print customer copy

## CREDIT PRE-AUTHORIZATION

Press the DOWN scroll arrow to access Transaction Menu  
 Press 2 for Pre-authorization function  
 Enter amount of pre-authorization, press OK  
 Press OK again and pass terminal to customer  
 Customer confirms sale amount inserts/swipes credit card (only)  
 Customer enters PIN #  
 Terminal will process transaction  
 Merchant presses OK to print receipt and customer copy

## PRE-AUTHORIZATION COMPLETION

Press the DOWN scroll arrow to access Transaction Menu  
 Press 3 for (pre-authorization) Completion function, press OK  
 Enter Invoice # press OK  
 Enter final amount of sale, press OK  
 Continue to next completion if necessary

## FORCED CREDIT CARD TRANSACTION

Press the DOWN scroll arrow to access Transaction Menu  
 Press 4 for Force Post, press OK  
 Enter manually obtained authorization number, press OK  
 Customer swipes/inserts card  
 Enter amount of forced (manual) transaction, press OK  
 Customer enters PIN #  
 Terminal will process transaction  
 Merchant presses OK to print receipt and down arrow for customer copy



### Cables Required:

S80 Power cable  
 Ethernet Cable  
 Telephone line if required

### MENU LAYOUT

Power button is used to switch terminal ON/OFF

The PAX S80 menu functions are arranged in two menus: Transaction and Administration

Scroll buttons are used to scroll through to display menu options

To access letters on the numeric keypad, press the key quickly until the desired letter appears

Press 0 (zero) twice for space,

Press Up button for [\*] and

Press Down button twice for [•]

Use yellow Corr button to go back one step

# PAX S80 Quick Reference Guide

## DEBIT CARD SALE

Enter sale amount, then press OK  
Press OK again and pass terminal to customer  
Customer confirms sale amount  
TIP: Customer chooses % or AMT, inputs tip and confirms total amount  
Customer inserts debit card  
CASHBACK: Customer chooses cashback amount, confirms total amount  
Customer chooses F3 Checking or F4 Savings account  
Customer enters PIN #  
Terminal will process transaction  
Merchant presses OK to print receipt and down arrow for customer copy

## DEBITREFUND

Press the DOWN ARROW to access Transaction Menu  
Press 5 for Refund function  
Enter Merchant Password, press OK  
Enter Invoice # of the transaction to be refunded, press OK  
Enter refund amount (excluding any surcharge amount), press OK  
Press OK again and pass terminal to customer  
Customer inserts/swipes card and confirms refund amount  
Customer chooses Checking or Savings account  
Customer enters PIN #  
Terminal will process transaction  
Merchant presses OK to print receipt and down arrow for customer copy

## CREDIT OR DEBIT CARD VOID

Press the DOWN ARROW to access Transaction Menu  
Press 6 for Void function  
Enter merchant password then press OK  
To Void the last transaction press Down scroll key  
To Void another transaction press Up scroll key,  
Enter Invoice #, press OK to confirm  
Customer inserts/swipes card and confirms void amount  
Customer enters PIN #  
Terminal will process transaction  
Merchant presses OK to print receipt and down arrow for customer copy

## REPRINT RECEIPT

Press the DOWN ARROW to access Transaction Menu  
Press 7 for Reprint function  
To Reprint receipt for last transaction press Down scroll key  
To Reprint other transaction press Up scroll key  
Enter Invoice #, press OK to confirm  
Terminal will print receipt

## SETTLEMENT

Press UP ARROW to access Admin Menu  
Press 1 for Settlement, enter Merchant Password, press OK  
Confirm total Sales  
Confirm total Refunds  
Confirm that totals Match  
Print Summary Report  
Confirmation will print

## CHANGING THE LANGUAGE

Press **UP ARROW** to access Admin menu  
Select 3 - **SETUP** then 1 - **OPTIONS**  
Enter ADMIN password, press OK  
**MERCHANT LANGUAGE** option appears  
Choose Language  
Press Cancel twice to return to main screen

## TRAINING MODE

**IMPORTANT NOTE:** When terminal is in training mode any Sale transactions will not be processed. Please ensure you turn Training OFF to begin accepting payments.  
Batch must be closed (complete settlement) to be in training mode

Press **UP ARROW** to access admin menu  
Press/scroll to 8 for **TRAINING** mode  
Enter merchant password, press OK  
Select YES/NO, press OK

## TECHNICAL SUPPORT

For assistance contact us:  
**1 888 800 6622**  
support@ctpayment.com